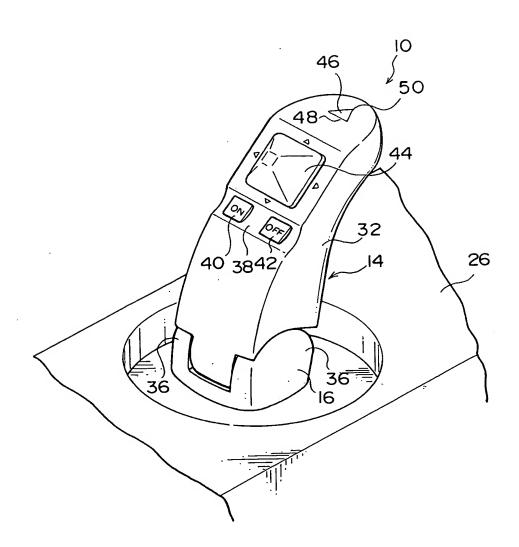
FIG.1



A Manager of the state of the s

FIG.2


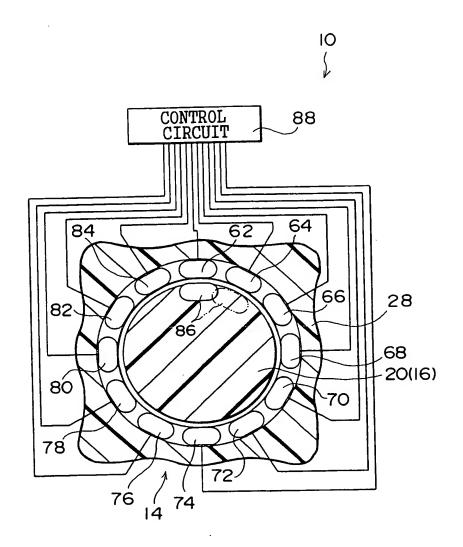




FIG.3

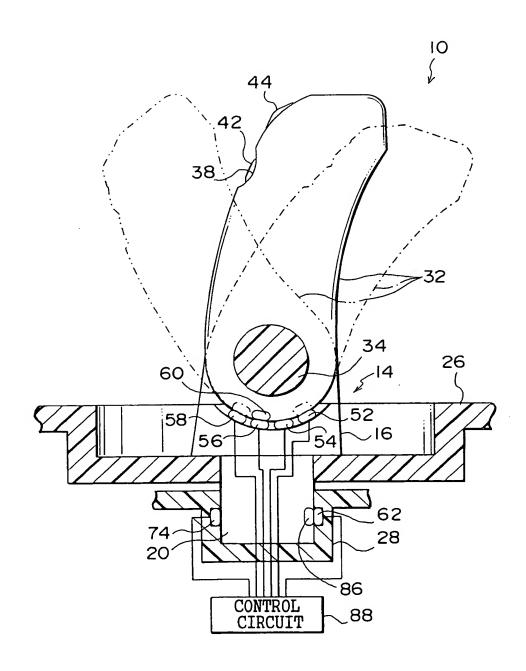

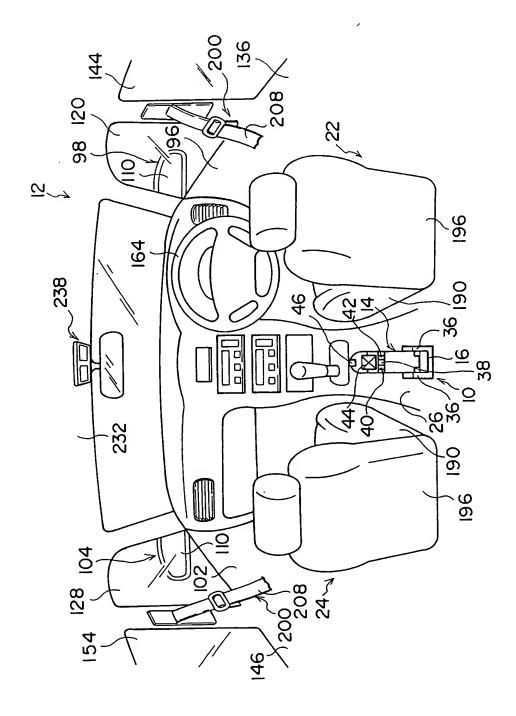


FIG.5

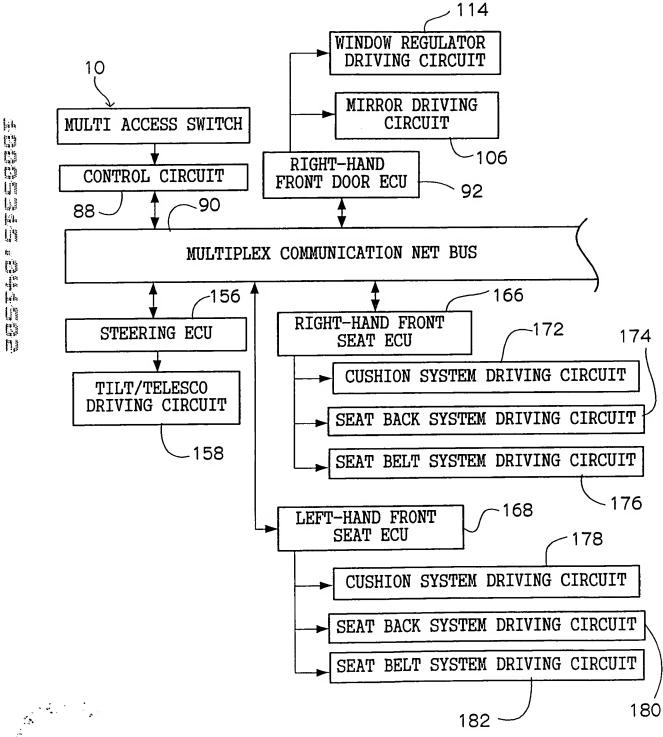


FIG.5 (CONTINUED)

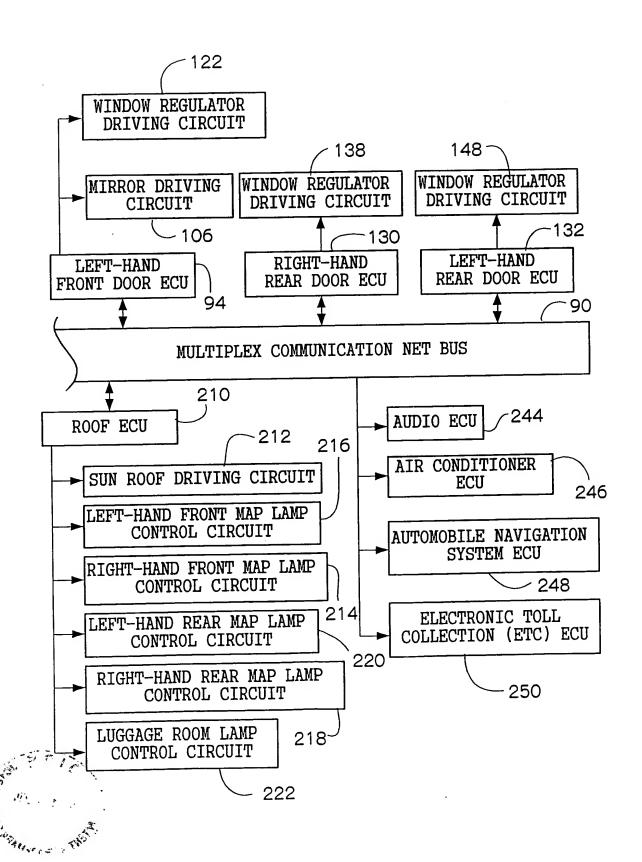


FIG.6


The state of the s

RELATIONSHIPS BETWEEN ENERGIZED STATE OF SWITCHES 52 TO 58, 62 TO 84 AND CONTROLLABLE ECU BY CONTROLLER 14

SWITCH 72		ROOF ECU 210 (RIGHT-HAND REAR MAP LAMP CONTROL CIRCUIT 218)		
SWITCH 70		RIGHT-HAND REAR DOOR ECU 132 (WINDOW REGULATOR DRIVING CIRCUIT 138)		
SWITCH 68		RIGHT-HAND FRONT SEAT ECU 166 (SEAT BELT SYSTEM DRIVING CIRCULT 176)	RIGHT-HAND FRONT SEAT ECU 166 (SEAT BACK SYSTEM DRIVING CIRCULT 174)	RIGHT-HAND FRONT SEAT ECU 166 (SEAT CUSHION SYSTEM DRIVING CIRCUIT 172)
SWITCH 66		RIGHT-HAND FRONT DOOR ECU 92 (WINDOW REGULATOR DRIVING CIRCUIT 114)		
SWITCH 64		ROOF ECU 210 (RIGHT-HAND FRONT MAP LAMP CONTROL CIRCUIT 10)	RIGHT-HAND FRONT DOOR ECU 92 (MIRROR DRIVING CIRCUIT 100)	STEERING ECU 156
SWITCH 62	ROOF ECU 210 (SUN ROOF DRIVING CIRCUIT 212)	AUTOMOBILE NAVIGATION SYSTEM ECU 248	AUDIO ECU 244	AIR CONDITIONER ECU 246
	SWITCH 52	SWITCH 54	SWITCH 56	SWITCH 58
	SWITCH 64 SWITCH 66 SWITCH 68 SWITCH 70	ROOF ECU 210 (SUN ROOF DRIVING CIRCUIT 212)	ROOF ECU 210 (SUN ROOF DRIVING CIRCUIT 212) ROOF ECU 210 (SUN ROOF DRIVING CIRCUIT 212) ROOF ECU 210 (RIGHT-HAND RIGHT-HAND RIGHT-HAND FRONT BELT REAR DOOR ECU PRONT MAP SYSTEM ECU PRONT MAP SYSTEM ECU CIRCUIT 10) SYSTEM ECU 210 (RIGHT-HAND PRONT BELT REAR DOOR ECU DRIVING CIRCUIT 176) CIRCUIT 138) CIRCUIT 10) CIRCUIT 114)	ROOF ECU 210

FIG.6 (CONTINUED)

		00 F(C)		
SWITCH 84		ROOF ECU 210 (RIGHT-HAND REAR MAP LAMP CONTROL CIRCUIT 220)		
SWITCH 82		·	LEFT-HAND FRONT DOOR ECU 94 (WINDOW REGULATOR DRIVING CIRCUIT 122)	
SWITCH 80		LEFT-HAND FRONT SEAT ECU 168 (SEAT BELT SYSTEM DRIVING CIRCUIT 182)	LEFT-HAND FRONT SEAT ECU 168 (SEAT BACK SYSTEM DRIVING CIRCUIT 180)	LEFT-HAND FRONT SEAT ECU 168 (SEAT CUSHION SYSTEM DRIVING CIRCUIT 178)
SWITCH 78			LEFT-HAND REAR DOOR ECU 132 (WINDOW REGULATOR DRIVING CIRCUIT 148)	
SWITCH 76		ROOF ECU 210 (LEFT-HAND REAR MAP LAMP CONTROL CIRCULT 220)		·
SWITCH 74	ROOF ECU 210 (LUGGAGE ROOM LAMP CONTROL CIRCUIT 222)			
	SWITCH 52	SWITCH 54	SWITCH 56	SWITCH 58

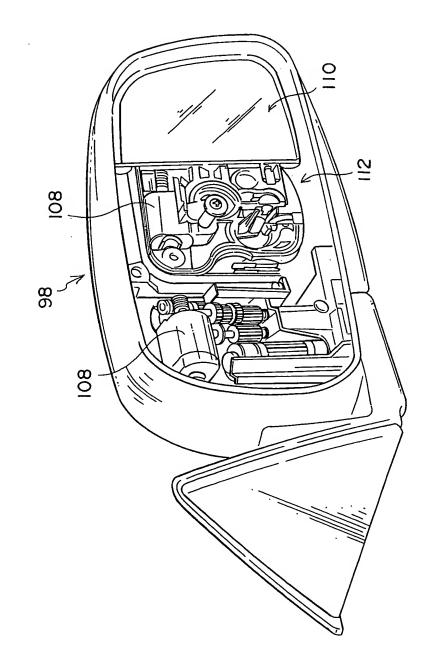



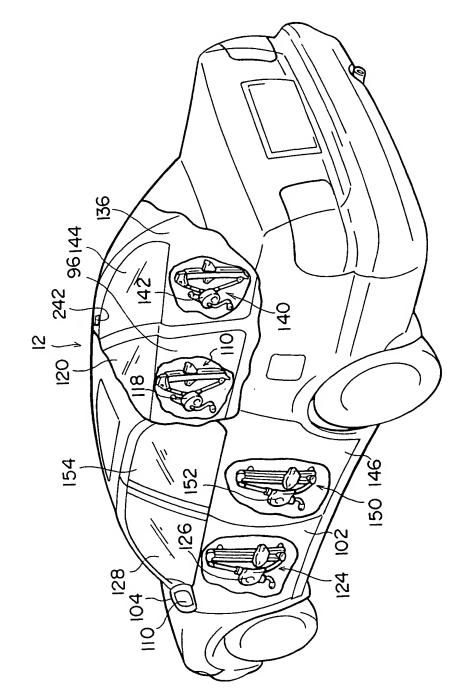




FIG.9

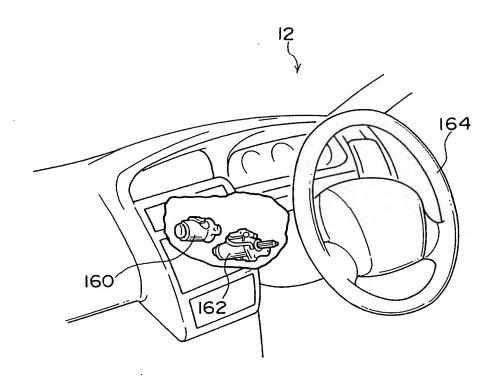




FIG.10

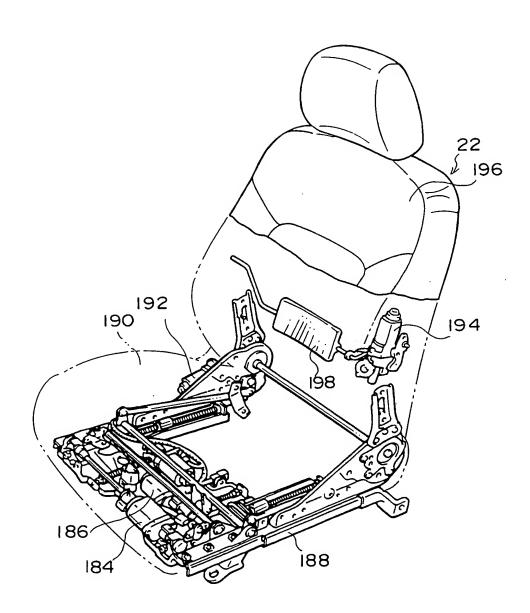
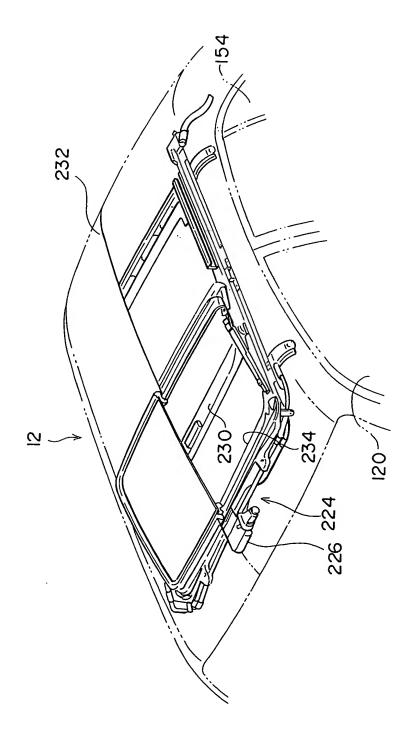


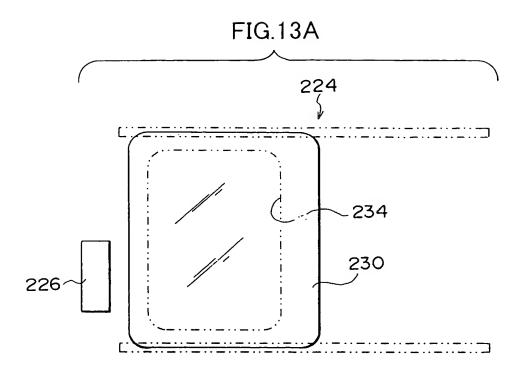



FIG.11


4. C. C. C. C.









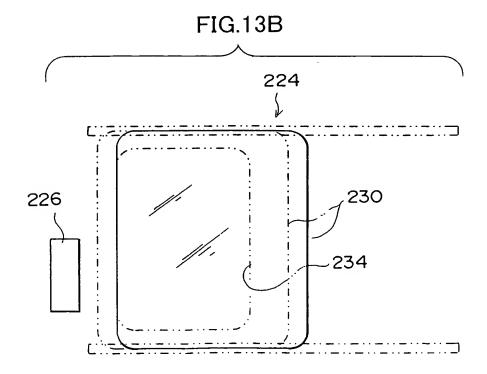

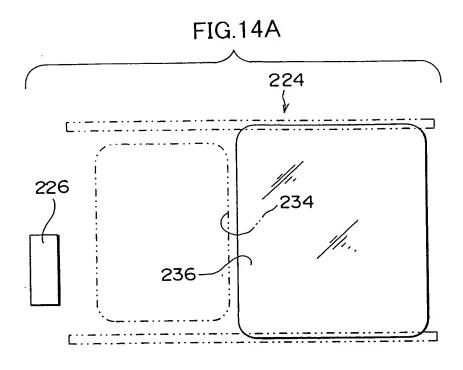

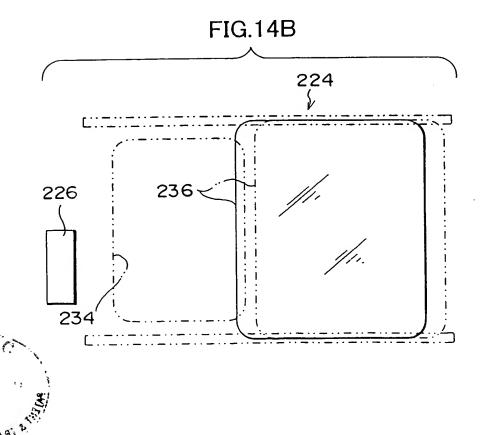

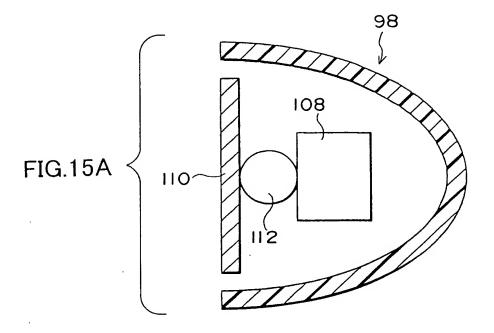

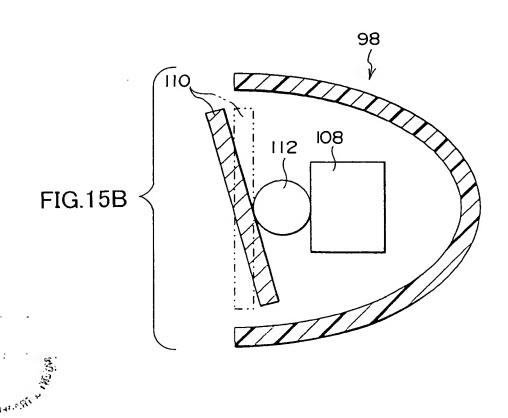


FIG.16A

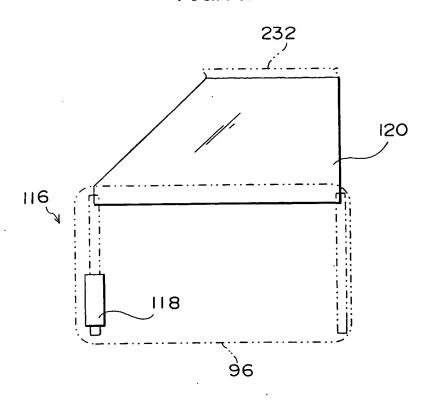


FIG.16B

